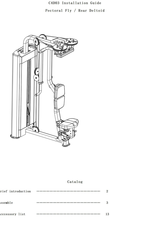

Catalog

Brief introduction ———————————— 2
Assemble ———————————— 3
Accessory list ———————————— 13

Introduction

Please take the time to read these instructions carefully before installation. Please refer to the list in the instruction manual to confirm the completeness and quantity check of all parts. If any parts are missing or damaged in transit, please call our after-sales service immediately. When installing the equipment, please follow the relevant instructions to install the equipment correctly.

This equipment is designed to provide the comfortable and most effective workout. After installation, you need to understand all the functions in order to use it correctly. If you find any problem during use, you should stop using it immediately to avoid physical injury and equipment damage. And promptly refer to the relevant instructions to inquire about the cause. If you can not solve the problem, please call our after-sales service. After carefully reading all the instructions, please continue

rubber mallet
level ruler
Allen wrench
Tape people
cutting clamp
adjustable wrench

Assemble

Step 1:Attach the counterweight frame (1) to the lower shroud (6) with the counterweight foot pads (42) using the M8*16 bolts (101).

1. 4×M8×16Bolts& washer cheese head screws (101)
Tighten the bolts with a wrench before proceeding to the next step

Step 2: Attach the Front and Back Fork Attachment Bracket (2) to the Counterweight Bracket (1) and attach the Flat Seat Post Tube (40) to

1. 4×M8×16Bolts& washer cheese head screws (101)
2. 4×M8Spring mat (111)
3. 4×M8×65M5Flat mat (113)
Tighten the bolts with a wrench before proceeding to the next step

Assemble

Step 3: Attach the Rotary and Back Fork Side Frame (3)(4) to the Rotary and Back Fork Attachment Frame (2) by

1. 4×M8×80Cheese washer cheese head screws (12)
2. 4×M8Spring washer (11)
3. 4×M8×65M5Flat mat (113)
Tighten the bolts with a wrench before proceeding to the next step

Step 4: Connect the Rotary and Back Fork Side Frame (3)(4) to the Rotary and Back Fork Side Frame (10) and Counterweight Frame (1) by

1. 4×M8×80Cheese washer cheese head screws (12)
2. 4×M8Spring mat (11)
3. 4×M8×65M5Flat mat (113)
Tighten the bolts with a wrench before proceeding to the next step

Assemble

Step 5: Connect the Left/right Flange (5)(36) with the Pan force axle (10) and the two spindles (14) using.

1. 4×M8×80Cheese washer cheese head screws (12)
2. 4×M8Spring washer (11)
3. 4×M8×65M5Flat washer (113)
Tighten the bolts with a wrench before proceeding to the next step

Step 6:Connect the round pad (16) to the pressure plate (15) by

1. 2×M8×80Cheese washer cheese head screws (12)
2. 2×M8Shell mat (107)
Tighten the bolts with a wrench before proceeding to the next step

Assemble

Step 7: Attach the two plastic (17) from the previous step's assembly to the Chest and Back Fiber Side Frame (3)(4) by

1. 8×M8×80Cheese washer cheese head screws (12)
2. 8×M8Spring washer (11)
3. 8×M8×65M5Flat washer (113)
Tighten the bolts with a wrench before proceeding to the next step

Assemble

Step 8:Connect the two metallic axles (28) and the two force axes (10) with.

1. 8×M8×80Cheese washer cheese head screws (12)
2. 8×M8Spring washer (11)
3. 8×M8×65M5Flat washer (113)
Tighten the bolts with a wrench before proceeding to the next step

Assemble

Step 9: Attach the Chest and Back Fiber Side Frame (3)(4) to the Chest and Back Fiber Side Frame (3)(4) by.

1. 2×M8×80Cheese washer cheese head screws (12)
2. 2×M8Spring mat (11)
Tighten the bolts with a wrench before proceeding to the next step

Step 10: Attach the round pad (16) to the Chest and Back Fiber Side Frame (3)(4) using.

1. 2×M8×80Cheese washer cheese head screws (12)
2. 2×M8Spring washer (11)
3. 2×M8Shell mat (107)
Tighten the bolts with a wrench before proceeding to the next step

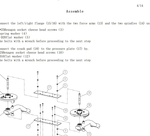

Assemble

Step 11:Attach the two plastic (17) from the previous step's assembly to the Chest and Back Fiber Side Frame (3)(4) by

1. 8×M8×80Cheese washer cheese head screws (12)
2. 8×M8Spring washer (11)
3. 8×M8×65M5Flat washer (113)
Tighten the bolts with a wrench before proceeding to the next step

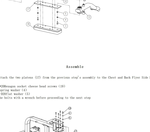

Assemble

Step 12:Connect the two metallic axles (28) and the two force axes (10) with.

1. 8×M8×80Cheese washer cheese head screws (12)
2. 8×M8Spring washer (11)
3. 8×M8×65M5Flat washer (113)
Tighten the bolts with a wrench before proceeding to the next step

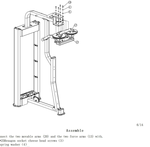

Assemble

Step 13: Attach the two Back Pads (22) to the Chest and Back Fiber Side Frame (3)(4) by.

1. 2×M8×80Cheese washer cheese head screws (12)
2. 2×M8Spring washer (11)
3. 2×M8Shell mat (107)
Tighten the bolts with a wrench before proceeding to the next step

Step 14: Attach the cushion (23) to the seat and Back (21) using.

1. 2×M8×80Cheese washer cheese head screws (12)
2. 2×M8Spring washer (11)
3. 2×M8Shell mat (107)
Tighten the bolts with a wrench before proceeding to the next step

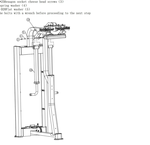

Assemble

Step 15:Open the pre-installed with sheets and install the wire rope 1 (38) and wire rope 2((39) back to its original place after tightening.Then extend the belt sheets to the square on sheets to the figure below, with the ends of wire rope 1 (38) connected to the left/right Flanges (5)(36) respectively.

Note the installation process of attaching the two sheets boxes (23) to the Rotational Plate (24) Frame (1) (8) and the Rotary and Back Fork Side Frame (3)(4) and connecting the Pan Force Axle 1 (28) to the Pan Base (6) (26) with the Lifting Sheets Frame (30).

Assemble

Step 16: Place the pre-installed guide bar assembly (32) into the counterweight frame (1)..

Install the 20-piece counterweight block (34) onto the guide bar (32) with the installation tube facing up.

Install the guide block assembly (33) onto the guide bar (32).
Attach the guide bar retaining plate (31) to the guide bar (32).

Attach the guide bar assembly about (31) to the counterweight frame (1) by.

1. 4×M8×80Cheese washer cheese head screws (12)

Install the counterweight block about (33) into the counterweight block (34), note that when installing the counterweight block, the notch should be on the left side of the guide block assembly (33) after assembly through the guide bar.

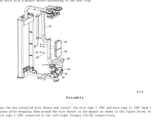

Tighten the bolts with a wrench before proceeding to the next step

Assemble

Step 17:Slide the two 5/8 Drive (600) into the Bolt-on (607) and use the Bolt-on Plates to attach to the Counterweight Rack (601).

Slide the Side Frame (600) into the two Bolt-on (607) and use the Bolt-on Plates to attach to the Counterweight Rack (601).

Attach the upper shroud (600) to the counterweight frame (601) by.

1. 4 x Hexagon socket sleeve head screws (602)

Then (2) Attach the Top Cover Tray (6040) to the Counterweight Frame (601) by.

1. 4 x Hexagon socket sleeve head screws (602)

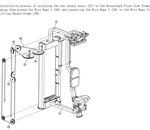

Assemble

Step 18: Place the assembled trainer in the proper position.

Important Note

Now that the Personal Fit/Rear Unfold is assembled, you need to take a moment to make sure your unit is level and plumb. For a level to have a true reading, it must be placed on a flat surface. Your unit is level when the vertical bar must become some of the frame members to crossmake and tighten the bolts.

Accessory list

no	Name and specification	QTY
1	counterweight frame	1
2	Connection frame	1
3	Hexagon socket sleeve head screws (M4*60)	16
4	Spring mat (M10)	80
5	Flat mat (M10*M5)	80
6	counterweight lower shroud	1
7	Hexagon socket sleeve head screws (M4*45)	4
8	side frame C	1
9	side frame B	1
10	Hexagon socket sleeve head screws (M4*12)	16
11	spring mat (M8)	4
12	Flat mat (M8*M16)	12
13	force axis	2
14	main axis	2
15	left Flange	1
16	Right Flange	1
17	power board	2
18	crank cushion	1
19	Hexagon socket sleeve head screws (M4*60)	8
20	movement arm	2
21	Seat frame	1

Accessory list

no	Name and specification	QTY
22	cushion	1
23	Hexagon socket sleeve head screws (M4*60)	2
24	backrest	1
25	Hexagon socket sleeve head screws (M4*40)	4
26	Effect plug	4
27	pan box	2
28	axle(s)	1
29	axle(b)	1
30	Axle Sleeve	1
31	Guide bar mounting plate	1
32	Guide bar assembly	1
33	Guide Block Assembly (Sleeve Rod)	1
34	Weight stack	20
35	weight stack pin	1
36	Connection strip	2
37	shield	1
38	Connection plate	2
39	upper shield	1
40	Hexagon socket sleeve head screws (M4*45)	2
41	counterweight fastener	2
42	Foot of Counterweight	4

The unmarked parts are not listed in this table.